

## Hot Water Cylinder Information



### Stop Valve

Use this to turn your water on and off.



### Temperature Control Valve

Use this to regulate the temperature of your hot water.



### Tempering Valve

Use this to release the pressure from your cylinder **every 6 months** or so.

If your water temperature is fluctuating this valve has failed. Contact your plumber to have it replaced.



### Pressure Relief Valve

Lift the lever to release the pressure from your cylinder **every 6 months** or so.



### Cylinder Leaking?

If you notice water in the tray that the cylinder is sitting in contact your plumber without delay.

You should also advise the Body Corporate in case the water has leaked to the unit below.